

1) Press **PROG** and **←** to enter to internal mode

2) Press **☀** or **☾** to select Address **Adr**

( comes with the address "11111111")

3) Press **←** to enter for setting, Press **☀** for setting "1" and **☾** for setting "0" for the selected digit.

4) Press **←** to confirm the setting address.

5) Below example shows how the address "11110011" to be matched in transmitter and receiver.

